

SAFETY TRIPOD TEMPORARY ANCHOR DEVICE

INSTRUCTION MANUAL

EN 795/B

Reference number:

TM 7 (AT-009)

READ CAREFULLY BEFORE **USE THE EQUIPMENT**

SECTION 1 - GENERAL DATA

DESIGNATED USE

Steel tripod TM 7 is a component of personal protective equipment against fall from height. Tripod has to be used in conjuction with fall arrest equipment. Tripod TM 7 is designed to use with RUP 502-B and RUP 503-B rescue lifting devices. It is recommended that TM 7 tripod was deployed by minimum two people. Tripod TM 7 provides protection for max. one person in any case.

TECHNICAL DATA

approved for use in potentially explosive areas (according to PN-EN 05201, PN-EN 05204)

Working height

legs fully extended: 229 cm legs fully retracted: 147 cm

Rozstaw nóg:

legs fully extended: 182 cm legs fully retracted: 119 cm

Weight: 35kg


Shipping dimensions: 180x24x24 cm

BASIC EQUIPMENT

head - made of zinc-plated painted steel

- attachment points 1 central attachment point (eye-bolt) and 3 side attachment points in head's walls.

 legs made of zinc-plated steel. Telescopic construction allows the user to adjust their length. To adjust the leg's length locking pin are used. The legs of the tripod are equipped with self-aligning steel feet with rubber pads. The feet have anti-slip "teeth" used when positioning the tripod on a slippery (e.g. icy) surface.
 chain - leg chain is supplied to minimaze horizontal forces and prevent the legs spreading and collapsing.

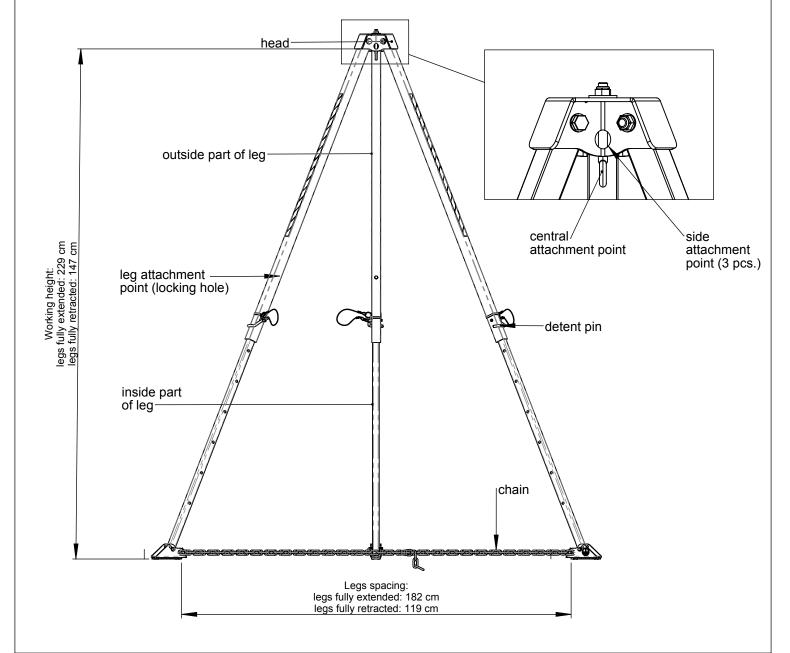


edition: 2/18.02.2014 en 1/8

CERTIFICATION AND COMPLIANCE WITH STANDARDS

a) EN 795:2012 type B. Equipment use as a transportable temporary anchor point for one person. EC certificate.
b) EN 1496:2006 type B. Equipment use with RUP502-B / RUP503-B as an rescue kit for one person. Compliance with standard and document EN 1496/B:2006. Not covered by the EC certificate.

CONTENT OF THE IDENTITY LABEL

- a) Device type.
- b) Model symbol.
- c) Reference number.
- d) Number/year/class of the European standard.
- e) CE marking and number of a notified body controlling manufacturing of the equipment.
- f) Month and year of manufacture. g) Serial number of the tripod.
- h) Caution: read the manual.
- i) Marking of the manufacturer or distributor of the tripod.
- j) Maximum number of users permitted simultaneously.

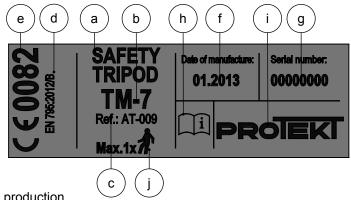

The Notified Body involved with EC type examination and in the production control phase: APAVE SUDEUROPE SAS, CS 60193, 13322 Marseille, France.



Month and year of the manufacturer's next inspection.

Don't usethe device after this date.


Attention: Before the first use mark the date of inspection (date of first use + 12 months, e.g. first use 01.2012 - mark inspection 01.2014).

"Next inspection label" placed near Identity Label.

SECTION 2 - DEVICE INSTALLATION

INSTALLING A TRIPOD


- Place the tripod on a flat, stable and hard surface. Pull out the tripod legs to the desired length and lock with the locking pin.
- Set the tripod in an upright position and fully 2. spread the legs.
- Make sure the feet are on firm ground and can 3. support the load.
- Adjust the length of the legs so that the head is 4. located in the horizontal plane.
- 5. The tripod should be positioned over opening so working line will be located approximately in the center of the opening.
- Make sure that locking pins are properly secured 6. the end of the locking pin must protrude above the surface of the tripod legs.
- Secure the tripod legs with the chain against the accidental sliding open. The ends of the chain 7. must be fastened with a snap hook. The chain should be tight between the legs of the tripod. Remove excess slack of the chain.

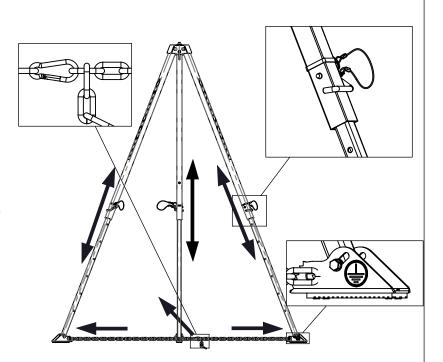

MAXIMUM LOAD TRANSMITTED FROM THE TM 7 TO THE STRUCTURE / LOADING DIRECTION

Surface, where the TM 7 safety tripod was placed on must support the max. device load of 12 kN. Loading direction: perpendicular to the surface on which the TM 7 safety tripod is placed.

SECTION 3 - PERSONAL PROTECTION ACCORDING TO EN 795/B

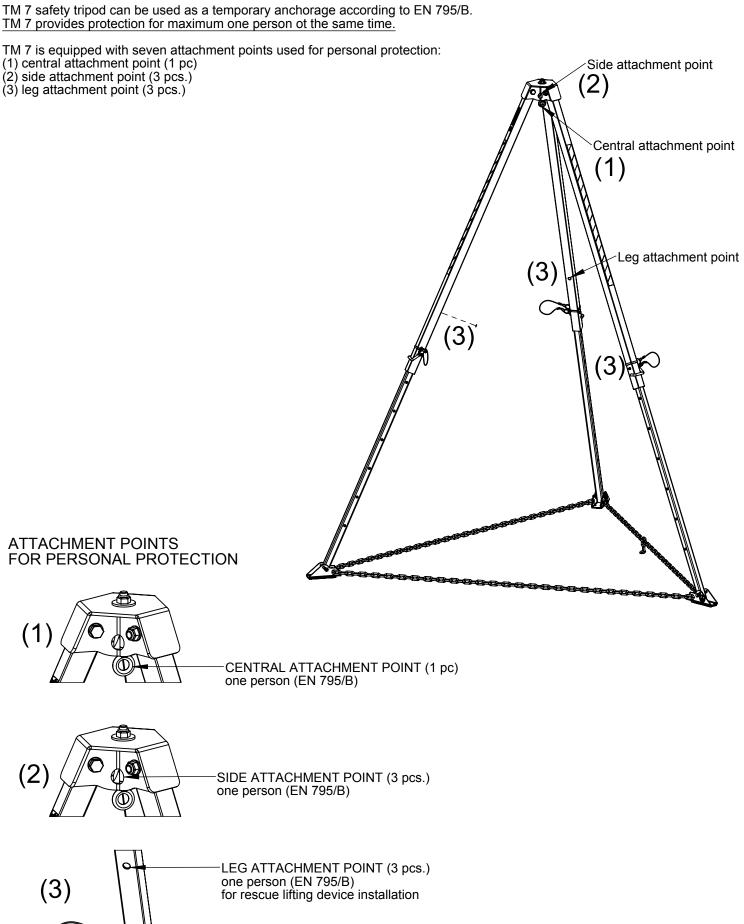

INSPECTION

Before each use of personal protective equipment it is obligatory to carry out a pre-use check of the equipment, to ensure that it is in a serviceable condition and operates correctly before it is used.

During pre-use check it is necessary to inspect all elements of the equipment in respect of any damages, excessive wear, corrosion, abrasion, cutting or incorrect acting, especially take into consideration:

- in full body harnesses and belts buckles, adjusting elements, attaching points, webbings, seams, loops; in energy absorbers attaching loops, webbing, seams, casing, connectors;
- in textile lanyards or lifelines or guidelines rope, loops, thimbles, connectors, adjusting elements, splices;
- in steel lanyards or lifelines or guidelines cable, wires, clips, ferrules, loops, thimbles, connectors, adjusting elements;
- in retractable fall arresters cable or webbing, retractor and brake proper acting, casing, energy absorber, connector;
- in guided type fall arresters body of the fall arrester, sliding function, locking gear acting, rivets and screws, connector, energy absorber;
- in connectors main body, rivets, gate, locking gear acting;
- in tripods legs, safety pins, eye bolts, feet, chain, connecting elements.

PERIODIC INSPECTION

After every 12 months of utilization, personal protective equipment must be withdrawn from use to carry out periodical detailed inspection. The periodic inspection must be carried out by a competent person for periodic inspection. The periodic inspection can be carried out also by the manufacturer or his authorized representative. In case of some types of the complex equipment e.g. some types of retractable fall arresters the annual inspection can be carried out only by the manufacturer or his authorized representative.

During this inspection will be established admissible time of the device use till next manufacturer's inspection.

The result of the inspection must be recorded in Identity Card.

Regular periodic inspections are the essential for equipment maintenance and the safety of the users which depends upon the continued efficiency and durability of the equipment.

During periodic inspection it is necessary to check the legibility of the equipment marking.

ADMISSIBLE TIME OF USE

The tripod can be used for 5 years counting from a date of putting the tripod into operation. After this period the tripod must be withdrawn from use to carry out manufacturer's detailed inspection.

The manufacturer's inspection can be carried out by:

- manufacturer
- person recommended by manufacturer
- company recommended by manufacturer.

During this inspection will be established admissible time of tripod use till next manufacturer's inspection and recorded in Identity Card.

WITHDRAWAL FROM USE

Personal protective equipment must be withdrawn from use immediately when any doubt arise about its condition for safe use and not used again until confirmed in writing by equipment manufacturer or his representative after carried out the detailed inspection.

WITHDRAWN FROM USE AFTER ARRESTING A FALL

Device must be withdrawn from use immediately when it have been used to arrest a fall. After that must be carried out detailed manufacturer's inspection of the tripod.

The manufacturer's inspection can be carried out by:

- manufacturer
- person recommended by manufacturer
- . company recommended by manufacturer.

During this inspection will be established if the tripod can be longer used and will be define the admissible time of tripod use till next manufacturer's inspection and recorded in Identity Card.

TRANSPORTATION

Personal protective equipment must be transported in the package (e.g.: bag made of moisture-proof textile or foil bag or cases made of steel or plastic) to protect in against damage or moisture.

MAINTENANCE AND STORAGE

The equipment can be cleaned without causing adverse effect on the materials in the manufacture of the equipment. For textile products use mild detergents for delicate fabrics, wash by hand or in a machine and rinse in water. Plastic parts can be cleaned only with water. When the equipment becomes wet, either from being in use or when due cleaning, it shall be allowed to dry naturally, and shall be kept away from direct heat. In metallic products some mechanic parts (spring, pin, hinge, tec.) can be regularly slightly lubricated to ensure better operation. Other maintenance and cleaning procedures should be adhered to detailed instructions stated in the manual of the equipment.

Personal protective equipment should be stored loosely packed, in a well-ventilated place, protected from direct light, ultraviolet degradation, damp environment, sharp edges, extreme temperatures and corrosive or aggressive substances.

GENERAL PRECAUTIONS

- While working PAY ATTENTION to the chain which fastens the tripod legs, as it can cause accidental tripping of the
- TM 7 safety tripod MUST NEVER BE USED without chain. Legs MUST ALWAYS BE fastened with chain.
- AVOID working where the user may swing and hit an object or where lines may cross or tangle with that of another worker in the area
- Fall arrest and rescue systems used with this device MUST MEET applicable EN standards requirements (EN 795 for anchor devices; EN 362 for connectors; EN 361 for full body harnesses; EN 360 for retractable type fall arresters; EN 1496 for rescue lifting devices; EN 1497 for rescue harnesses; EN 341 for descender devices). Always use T-locks's to maintain trolleys required position during operation.
- The Maximum Arrest Force (MAF) to which a user of a Fall Arrest System (FAS), who wears a full body harness, is exposed during an arrest of his/her fall is limited by law 6 kN in EU. The system used to protect user against fall from height must include fall protection equipment reducing the Maximum Arrest Force, acting on the user while arresting the fall, to maximum value of 6kN (e.g. fall safety energy absorber with lanyard or retractable fall arrester).
- Tripod TM 7 provides protection for max. one person in any case.
- Make sure that device is installed in a upright position on a flat, stable and hard surface. The surface must support the load.
- It is recommended that the device should be transported and installed by minimum two people.
- The anchor device or anchor point for the fall arrest system should always be positioned, and the work carried out in such a way, as to minimize both the potential for falls and potential fall distance. The anchor device/point should be placed above the position of the user. The shape and construction of the anchor device/point shall not allowed to self-acting disconnection of the equipment. Minimal static strength of the anchor device/point is 12 kN. It is recommended to use certified and marked structural anchor point complied with EN 795.

THE ESSENTIAL PRINCIPLES OF USE OF PERSONAL PROTECTIVE EQUIPMENT

- Personal Protective Equipment (PPE) shall only be used by a person trained and competent in its safe use. PPE must not be used by a person with medical condition that could affect the safety of the equipment user in normal and
- A rescue plan shall be in place to deal with any emergencies that could arise during the work.
- It is forbidden to make any alterations or additions to the equipment without the manufacturer's prior written consent.
- Any repair shall only be carried out by equipment manufacturer or his certified representative.
- PPE shall not be used outside its limitations, or for any purpose other than that for which it is intended.
- PPE should be a personal issue item.
- Before use ensure about the compatibility of items equipment assembled into fall arrest system. Periodically check connecting and adjusting of the equipment components to avoid accidental loosening or disconnecting of the components.
- It is forbidden to use combinations of items of equipment in which the safe function of any one item is affected by or interferes with the safe function of another.
- It is essential for the safety of the user that if the product is re-sold outside the original country of destination the reseller shall provide instruction for use, for maintenance, for periodic examination and for repair in language of the country in which the product is to be sold.
- A full body harness (conforming EN 361) is the only acceptable body holding device that can be used in a fall arrest
- On full body harness use only attaching points marked with big letter "A" to attach a fall arrest system.
- It is obligatory to verify the free space required beneath the user at the workplace before each occasion of use the fall arrest system, so that, in the case of a fall, there will be no collision with the ground or other obstacle in the fall path. The required value of the free space should be taken from instruction manual of used equipment.
- There are many hazards that may affect the performance of the equipment and corresponding safety precautions that have to be observed during equipment utilization, especially:
 - trailing or looping of lanyards or lifelines over sharp edges,
 - any defects like cutting, abrasion, corrosion,
 - climatic exposure,
 - pendulum falls.
 - extremes of temperature,
 - chemical reagents.
 - electrical conductivity.

SECTION 4 - RESCUE ACCORDING TO EN 1496/B

- GENERAL PRECAUTIONS FOR RESCUE:
 Secondary fall arrest system (conforming EN 363) must be used when working with the TM 9 and RUP 502.
 Fall arrest and rescue systems used with this device MUST MEET applicable EN standards requirements (EN 795 for anchor devices; EN 362 for connectors; EN 361 for rull body harnesses; EN 360 for retractable type fall arresters; EN 1496 for rescue lifting
- devices; EN 1497 for rescue harnesses; EN 341 for descender devices).


 For rescue purposes with RUP 502 rescue lifting device always use SDW energy absorber (component of RUP 502 set).

 During installing rescue lifting RUP 502 or CRW 300 (with AT 172 fixing adapter) locking pin MUST BE embedded in locking hole.

 Only then rescue lifting device can be safely and firmly installed on the reinforced hexapod leg.

USAGE TM 7 SAFETY TRIPOD FOR RESCUE PURPOSES


TM 7 safety tripod can be used for rescue purposes in conjuction with RUP 502-B / RUP 503-B rescue lifting devices.

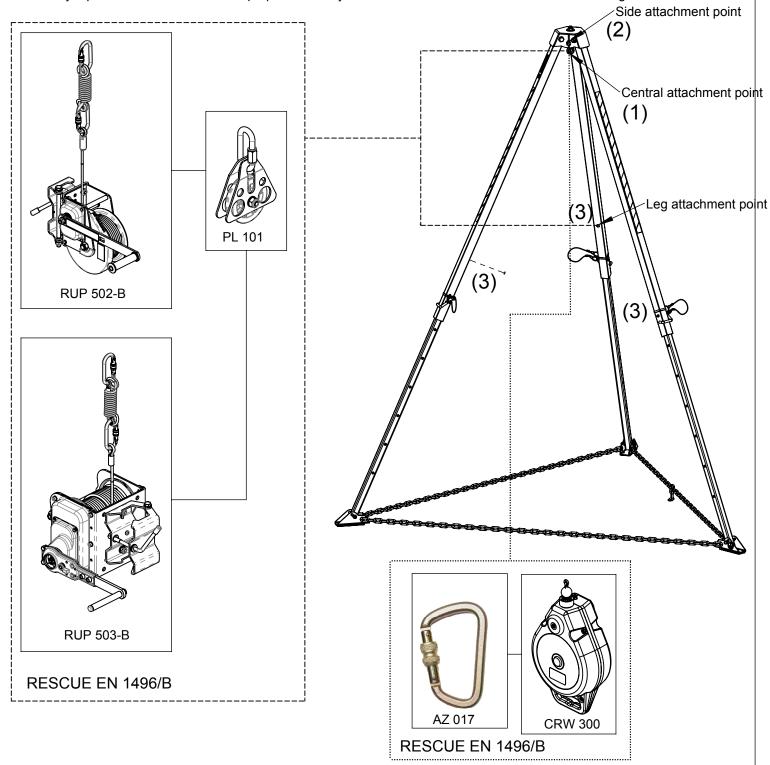



TM 7 + equipment	PL 101 + RUP 502-B	PL 101 + RUP 503-B	AZ 017 + CRW 300		
Standard	EN 1496/B				
Attachment point(s) in use	(1) (3) or (2) (3)	(2) (3)	(2)		
Max. number of users at the same time	1	1	1		
Working Load Limit	140 kg	200 kg	140 kg		

INSTALLING RESCUE LIFTING DEVICES

The tripod can be used with RUP 502-B and RUP 503-B rescue lifting devices. Devices should be installed on the tripod legs. The grip of the RUP 502-B / 503-B should be fastened on the locking hole situated on the inner wall of the outside part of tripod legs. The cable of RUP 502-B / 503-B devices should be guided through the rope pulley attached to the central (eyebolt) or one of the side attachment points. For proper and safe installation and use of the RUP502-B and RUP 503-B follow their manuals.

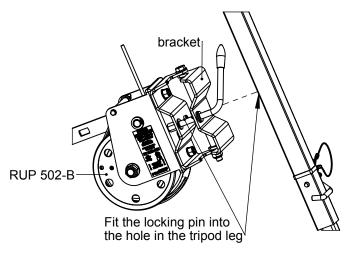

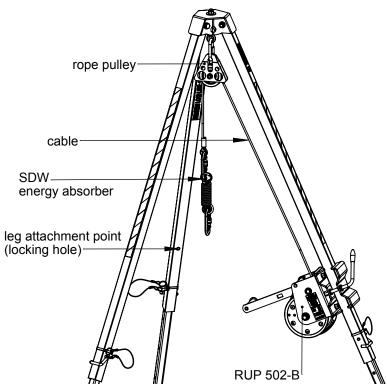

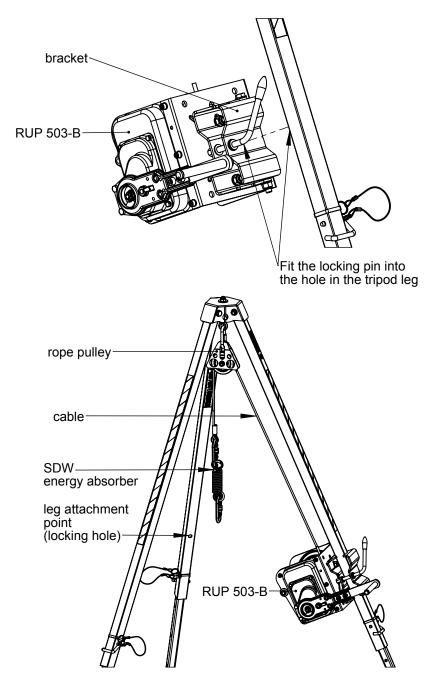

N	OTES					
		ID	EN	ΓΙΤΥ CARD		
CAI IN E EQI	RD SHOULD BE FII BEFORE THE FIRS UIPMENT'S WITHD	Y OF THE USER ORGANISATION TO F LLED IN ONLY BY COMPETENT PERS T USE OF THE EQUIPMENT. ANY INF DRAWN FROM USE SHALL BE NOTED T USE THE EQUIPMENT WITHOUT TH	ON RESPONDED TO THE IDEN	ONSIBLE FOR PROTECTIVE EQU N ABOUT THE EQUIPMENT LIKE: NTITY CARD SHOULD BE STORA	JIPMENT. THE IDENTITY CARD PERIODIC INSPECTIONS, REP	SHOULD BE FILLED AIRS, REASONS OF
MODEL AND TYPE OF EQUIPMENT						
R	EF. NU	MBER				
S	ERIAL I	NUMBER				
D	ATE OF	MANUFACTU	RE			
D	ATE OF	PURCHASE				
DATE OF FIRST USE						
USER NAME						
	PE	RIODIC EXAMI	NAT	ION AND REF	PAIR HISTOF	RY
	DATE	REASON FOR SERVICING / REPAIR	RE	EPAIRS CARRIED OUT	NAME AND SIGNATURE OF COMPETENT PERSON	DATE OF NEXT EXAMINATION
1						
2						
3						
4						
5						
6						
7						
8						
9						
J						